



Automatic Waterer

Item # 89PLWDP

Features:

- Use for horses, cattle, dogs, and other animals. No training required.
- Easy-cleaning bowl with removable drain plug made from durable, UV-resistant plastic (HDPE)

- Adjustable float control to maintain a constant water level.
- Water supply via 1/2" male NPT connection at 20-50 psi.

Contains:

- 1 Waterer Bowl Assembly
- 1 Float Assembly
- 1 Mounting Plate
- 2 Neoprene Washers
- 2 Piece Drain Plug Assembly with Rubber Washer
- 1 Square Plastic Plug (already assembled)

Tools Required:

- Drill
- 1/4" or 13/32" dia. Drill Bit
- Ratchet Wrench
- Flat Head Screwdriver
- 3" Extension
- 9/16" Hex Socket
- 9/16" Hex Wrench (when using through bolts)

Additional Items Required (not included):

Installing with Lag Screws

(1-5/8" min. surface thickness):

- 2 Lag Screws (3/8")
- 2 Flat Washers (3/8")

Installing with Through Bolts:

- 2 Bolts (3/8-16)
- 4 Flat Washers (3/8")
- 2 Hex Nuts (3/8-16)

1/2" Flex Hose Water Supply:

- No additional items required
- 1 Galvanized Union (1/2" NPT)

Note: DO NOT wrap garden hose with heat tape as softening and leaks may develop.

3/4" Pipe Water Supply:

- 1 Galvanized Reducing Coupling (3/4" NPT to 1/2" NPT)

Garden Hose Water Supply:

- 1 Garden Hose Thread Adapter (1/2")
- Female NPT (FW1608).
- 1 Hose Washer (T828)
- Light Gauge Wire Mesh (to protect hose from livestock).

Note: DO NOT wrap garden hose with heat tape as softening and leaks may develop.

Note: A back flow prevention device may be required. Check local plumbing codes or contact a local licensed plumber for additional information.

Drain Plug Operating Instructions:

Included is a two piece drain plug and a rubber washer.

1. Assemble rubber washer onto the threaded portion of the plug.

2. Insert the plug with rubber washer through the drain hole from the inside of the bowl.

3. Thread the drain plug nut onto the plug from the outside of the bowl, continue until tight. It may be required to hold the plug in place from the inside of the bowl while turning the drain plug nut from the outside. A flat head screwdriver can be placed in the slot on the drain plug to keep it from rotating.

4. To drain the bowl, rotate the drain plug nut counterclockwise from the outside of the bowl. It may be required to hold the plug in place from the inside of the bowl while turning the drain plug nut from the outside. A flat head screwdriver can be placed in the slot on the drain plug to keep it from rotating.

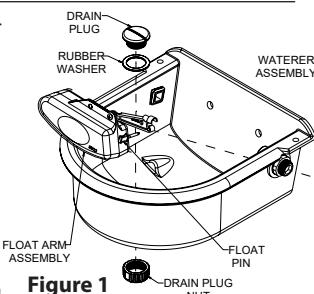


Figure 1

Mounting Instructions:

Note: The waterer is shipped with the float assembly installed on the right side of the waterer bowl. The float assembly can be installed on either side of the waterer to best suit your application. Carefully remove the square plastic plug and the mounting nut and fiber washer from the float assembly. Reinstall the float assembly on the left side and the square plastic plug on the right side of the waterer before proceeding.

1. Waterer valve cover comes loosely assembled. Remove valve cover, float pin, and float/arm assembly to gain access to mounting holes. (see Figure 2).

2. Mount the waterer to a flat rigid surface like a stall, fence, or post with the mounting surface (back) of the waterer bowl as vertical/plumb as possible. For additional protection against damage from animals, mount the waterer near

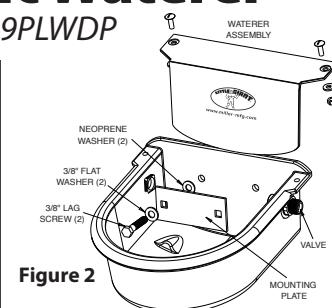


Figure 2

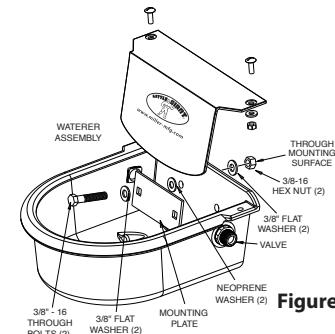


Figure 3

an inside corner if possible. **Note:** The waterer must be properly mounted to a vertical surface. The waterer will not work properly laying on the ground.

3. Use the water bowl to measure and mark the mounting holes at the desired mounting location.

4. Drill a hole in each of the two (2) marked locations.

a. If mounting the waterer with 3/8" lag screws, use a 1/4" dia. drill.

b. If mounting the waterer with 3/8-16" through bolts, use a 13/32" dia. drill.

5. Install the waterer as shown (see Figure 2 or 3).

Note: Always use the mounting plate provided.

6. Tighten the lag screws or through bolts securely and reinstall the float/arm assembly and pin.

7. Wrap all supply line pipe thread connections (including the threads on the valve) with Teflon® thread sealing tape and connect the water supply to the float assembly. DO NOT overtighten any fitting or supply line connection.

8. Check to make sure the waterer fills and shuts off properly.

9. The water level is preset at the factory; however, minor adjustments can be made to increase or decrease the water level in the waterer if desired.

To adjust the water level, remove float arm assembly by pulling out the connecting pin, loosen the float mounting screw and nut with a screwdriver, then rotate the float arm up or down to achieve desired water level. Make sure you retighten the mounting screw and nut securely.

CAUTION: Rotating the arm too far up or failing to secure the float mounting screw and nut may prevent the waterer from stopping the water supply flow and run continuously.


10. Once desired water level is set, place the valve cover over the valve and hand tighten the valve cover to the bowl with provided hardware.

OPERATING TIPS:

If the water flow does not stop...

1. Make sure water supply pressure is below 50 psi.
2. Make sure float arm moves up and down freely without binding.
3. Make sure float is not hitting the plastic valve cover when closed.
4. Remove float pin and float arm assembly:
 - a. Check for water inside the float. Replace SW23 float if necessary.
 - b. Remove any debris from valve tip or valve seal and test.
 - c. Replace SW8 seal and test. (An additional seal is provided on the side of the float arm)
 - d. Check SW20 valve tip for chips, surface imperfections, or cracks. Replace valve if necessary.

Replacement Parts*

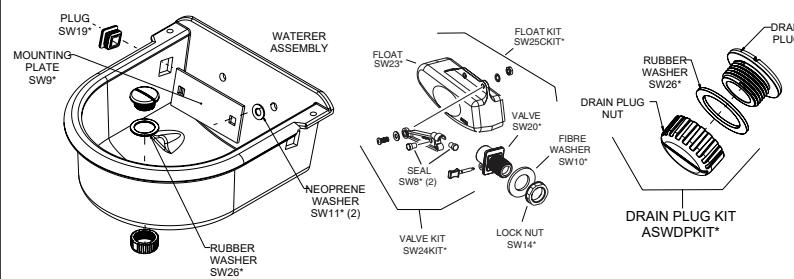

*Only items with part numbers are available for replacement.



Check out the complete line of Livestock Watering Items!

These all-purpose waterers work well for horses, cattle, hogs - even dogs!



Model FW16RED
Dura-Mate Automatic Waterer



Model FW16MTLBLACK
Dura-Mate Automatic Waterer

Little Giant® Stock Tanks are built tough for superior performance and long lasting durability. Stock Tanks have many versatile uses in the farm and ranch environment. Available in 15, 40, 75, 100 and 150 gallon size.



ST100 shown


Models:
ST15
ST40
ST75
ST100
ST150

Trough-O-Matic™ Float Valves are the perfect accessory to our stock tanks - they automatically control the water level using a standard 3/4" garden hose thread.



TM825 shown

Plastic Body
Models:
TM825
TM825T
TM825AS

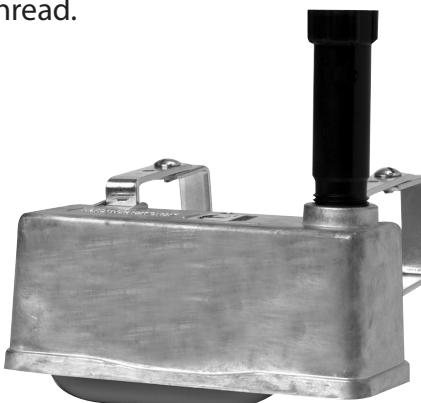

TM830AS shown

Metal Body
Models:
TM825
TM825T
TM825AS

For more information regarding the above items, visit our website at www.miller-mfg.com.



Jetez un coup d'œil à la gamme complète d'articles d'abreuvement pour bétail!



Ces abreuvoirs tout-usage sont idéaux pour les chevaux, les bovins, les porcs - même les chiens!

Modèle FW16RED
Abreuvoir automatique Dura-Mate

Modèle FW16MTLBBBLACK
Abreuvoir automatique Dura-Mate

Les réservoirs pour bétail Little Giant® sont fabriqués solidement pour obtenir une performance supérieure et une durabilité à long terme. Les réservoirs pour bétail peuvent être utilisés de nombreuses façons sur les fermes et les ranchs. Offerts dans des formats de 57, 151, 284, 378,5 et 568 litres (15, 40, 75, 100 et 150 gallons).



ST100 illustré

Les soupapes de bouée Trough-O-Matic™ F sont l'accessoire idéal à nos réservoirs pour bétail - elles contrôlent automatiquement le niveau d'eau en utilisant un filtre de tuyau d'arrosage standard de 1,9 cm (3/4 po).



Modèles à corps en plastique :
TM825
TM825T
TM825AS

Modèles à corps en métal :
TM825
TM825T
TM825AS

TM830AS illustré

Pour de plus amples renseignements concernant les articles ci-dessus, visitez notre site Web à www.miller-mfg.com.

1000591



Vea la línea completa de artículos para bebederos de ganado!



¡Estos bebederos multiuso dan buenos resultados con caballos, ganado, cerdos e incluso con perros!

Modelo FW16MTLBLACK
Bebedero automático Dura-Mate


Modelo FW16RED
Bebedero automático Dura-Mate



Se muestra el modelo ST100

Los tanques de agua para ganado Little Giant® están construidos para lograr una gran durabilidad y un desempeño superior. Los tanques de agua para ganado tienen muchos usos versátiles en el entorno de la granja y la hacienda. Disponibles en tamaños de 57, 151, 284, 378,5 y 568 litros (15, 40, 75, 100 y 150 galones).

Las válvulas de flotadores Trough-O-Matic™ son el accesorio perfecto para nuestros tanques de agua para ganado, controlan automáticamente el nivel de agua usando una rosca de manguera de jardín estandar de 1,9 cm (3/4").

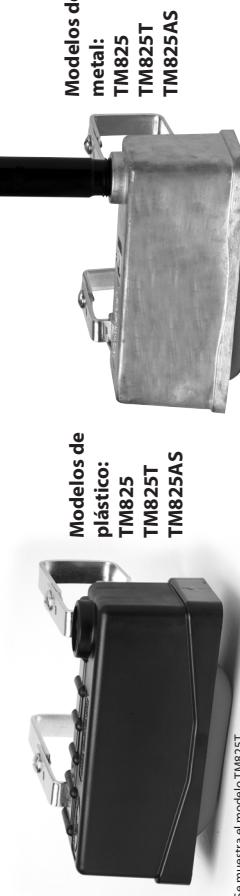

Modelos de plástico:
TM825
TM825T
TM825AS

Se muestra el modelo TM830AS

Para obtener más información sobre los artículos anteriores, visite nuestro sitio web en www.miller-mfg.com.

1000591