



HEATED PET MAT

Item # 98P-S, 98P-M and 98P-L

The heated mat is designed to provide gentle warmth for your pet.

IMPORTANT: In order to protect yourself and your pet, you must read and follow all instructions

Various Uses

- Dog houses
- Basements / Garages
- Kennels
- Indoors / Outdoors

Installation

When installing mat in confined space, such as a dog house or crate, the mat should never cover more than half the area. This will allow the pet to sleep either on or off the heated mat. **This is very important!**

Caution:

Connect to properly grounded (3-wire) outlets only. Use a ground fault interrupter in circuit. Do not use extension cord. Store indoors after winter season. Inspect cord before operating.

About the Heating System

The heated mat will become warm (not hot). Depending on the outside temperature, the mat may take up to one hour to reach its maximum temperature. The mat will feel slightly warm. Once the animal lies on the mat it will reach its maximum temperature.

Covers

You may cover the heated mat with any material. We also offer covers specifically designed to fit each size of mat. You may obtain these through your dealer or the factory.

Cleaning

The mat is easily cleaned. You may clean your mat by using a damp rag or hose. Never immerse this mat and always unplug the unit before cleaning. Reconnect the power cord only after the plug is completely dry.

Warranty

Miller Manufacturing Company products are warranted to the original purchaser to be free from defects in material and workmanship under normal use and service. Miller's obligations under this Warranty shall be limited to the repair or exchange of any part of parts which may thus prove defective under normal use and service within 12 months from the date of shipment by Miller to the original purchase, and which Miller's examination shall disclose to its satisfaction to be thus defective. The warranty is voided if there is evidence of general abuse such as animals checking on the cord. This warranty does not cover incidental or consequential damage resulting from either a defect in parts, materials or operation failure. Purchaser must deliver any part or parts to: Miller Manufacturing Company, 1450 West 13th Street, Glencoe, MN 55336 for examination. This Warranty does not apply to damage caused by misuse or neglect in the field, or failure to follow installation instructions.



HEATED PET MAT

Item # 98P-S, 98P-M and 98P-L

The heated mat is designed to provide gentle warmth for your pet.

IMPORTANT: In order to protect yourself and your pet, you must read and follow all instructions

Various Uses

- Dog houses
- Basements / Garages
- Kennels
- Indoors / Outdoors

Installation

When installing mat in confined space, such as a dog house or crate, the mat should never cover more than half the area. This will allow the pet to sleep either on or off the heated mat. **This is very important!**

Caution:

Connect to properly grounded (3-wire) outlets only. Use a ground fault interrupter in circuit. Do not use extension cord. Store indoors after winter season. Inspect cord before operating.

About the Heating System

The heated mat will become warm (not hot). Depending on the outside temperature, the mat may take up to one hour to reach its maximum temperature. The mat will feel slightly warm. Once the animal lies on the mat it will reach its maximum temperature.

Covers

You may cover the heated mat with any material. We also offer covers specifically designed to fit each size of mat. You may obtain these through your dealer or the factory.

Cleaning

The mat is easily cleaned. You may clean your mat by using a damp rag or hose. Never immerse this mat and always unplug the unit before cleaning. Reconnect the power cord only after the plug is completely dry.

Warranty

Miller Manufacturing Company products are warranted to the original purchaser to be free from defects in material and workmanship under normal use and service. Miller's obligations under this Warranty shall be limited to the repair or exchange of any part of parts which may thus prove defective under normal use and service within 12 months from the date of shipment by Miller to the original purchase, and which Miller's examination shall disclose to its satisfaction to be thus defective. The warranty is voided if there is evidence of general abuse such as animals checking on the cord. This warranty does not cover incidental or consequential damage resulting from either a defect in parts, materials or operation failure. Purchaser must deliver any part or parts to: Miller Manufacturing Company, 1450 West 13th Street, Glencoe, MN 55336 for examination. This Warranty does not apply to damage caused by misuse or neglect in the field, or failure to follow installation instructions.