



**Automatic Pet & Poultry Waterers: Item #'s PW5, PW13, EF3 & 166386**  
**Automatic Horse & Stock Waterers: Item #'s FW16, FW16MTL, 88SW & 88ESW**



PW5



PW13



EF3



166386



FW16 & FW16MTL



88SW & 88ESW

**\*\*PLEASE READ BEFORE FIRST USE\*\***

The water level on this unit has **NOT** been preset. Before use you must adjust the float height to achieve water shut off and your desired water depth.

To adjust the float height, loosen the float mounting screw and nut then rotate the float arm down to achieve water shut off and the desired water level. Make sure you retighten the mounting screw and nut securely.

**CAUTION:** Rotating the float arm too far up or failing to secure the float mounting screw and nut may cause the waterer to run continuously and overflow. If the water is not shutting off use the instructions below to rotate the float arm all the way down. If shut off is still not achieved please contact our Customer Service department at 1-800-260-0888.

1. Remove the float cover with a Phillips screwdriver
2. Remove float arm assembly by pulling out connecting pin, Figure 1
3. Loosen the float mounting screw and nut using a flathead screwdriver and pliers, Figure 2

Figure 2



- a. To increase water level move the float arm up, Figure 3

Figure 3



- b. To decrease water level move float arm down, Figure 4

Figure 4



4. Re-tighten the float mounting screw and nut
5. Re-install float arm assembly using connecting pin
6. Replace float cover


Figure 1



PW5, PW13, EF3 & 166386



88SW & 88ESW

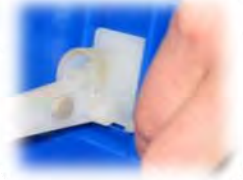

FW16 & FW16MTL

To view instructional videos on how to adjust the water shut off and achieve your desired water depth scan the appropriate QR code with your smart phone or visit our YouTube Channel at:

<http://www.youtube.com/user/millermfg1?feature=mhee>



PW5, PW13, EF3 & 166386



88SW & 88ESW



FW16 & FW16MTL