




Water Flow Sensor

LG5009-UC

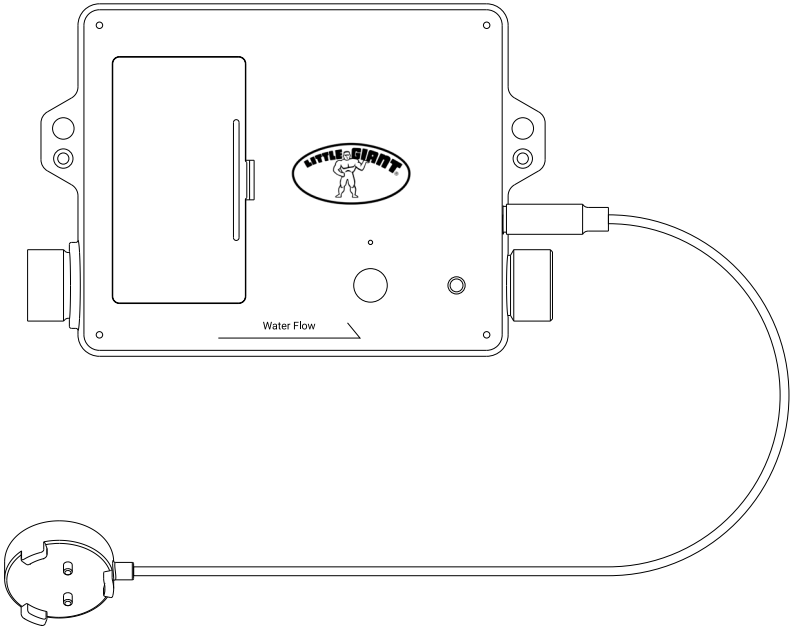

Installation & User Guide

Revision Aug. 31, 2026

Contents

A . Welcome!	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	05
E . Get to Know Your Water Flow Sensor	06
F . Install the App	08
G . Add Your Water Flow Sensor to the App	09
H . Before Installation	11
I . Install the Water Flow Sensor	12
J . Install the Probe Detection Cable	14
<hr/>	
K . Power up	16
L . Testing	16
M . App Functions: Device Screen	19
N . App Functions: Device Details Screen	21
O . App Functions: Alert Settings Screen	23
P . App Functions: Advanced Settings	24
Q . App Functions: Smart - Scene	25
R . App Functions: Smart - Automation	26
S . App Functions: Alarm Strategy Screen	27
T . Control-D2D	29
<hr/>	
V . Factory Reset	33
W . Firmware Update	34
X . Battery Replacement	35
Y . Specifications	37
Z . Warnings	39
AA. Warranty	41
AB. FCC Statement	42
AC. Contact Us	44

A Welcome!

Thank you for purchasing Little Giant® products! We appreciate you trusting Little Giant® for your smart farm and ranch automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

Miller Manufacturing

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Water Flow Sensor support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://miller-mfg.com/products/water-flow-sensor>

Or by scanning the QR code:




B Before You Begin, Continued




Your Water Flow Sensor connects to the internet via a Little Giant® hub, and it does not connect directly to your Wi-Fi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the BARN-IQ™ app has been installed on your smartphone, and a Little Giant® hub is installed and online (or your location, is already served by a Little Giant® wireless network).


C In the Box

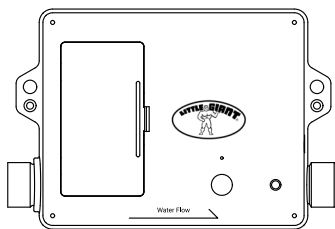


Water Flow Sensor

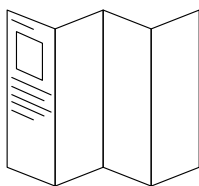


Quick Start Guide

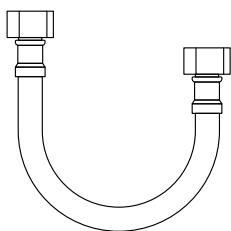


3/8" to 1/2" NPT Hose x 2

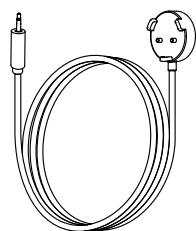

Detection Probe Cable




2 x AA Batteries

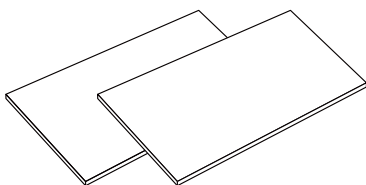


Double-Sided Tape x 2
1.2" x 2.4"

D Required Items

These items may be required to install the water meter:

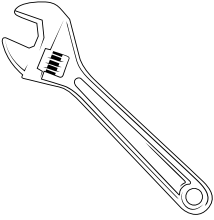

Adjustable Wrench

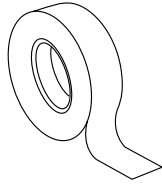


Double-Sided Tape

E

Get to Know Your Water Flow Sensor

Water Flow Sensor:

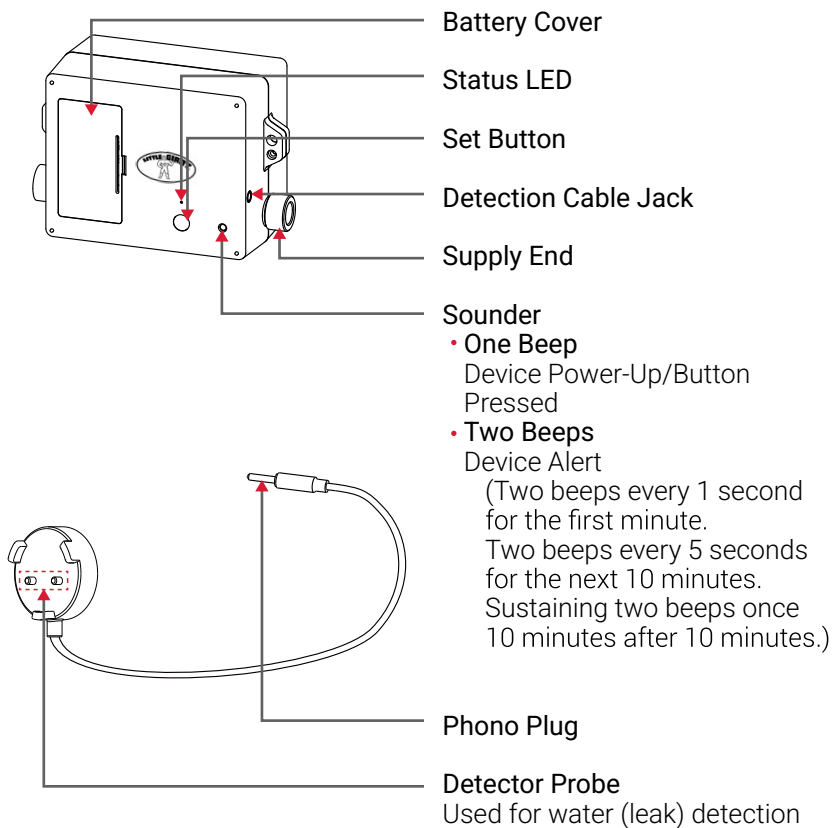



Get to Know Your Water Flow Sensor, Continued

LED Behaviors



Blinking Red Once, Then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Blinking Red Once
Valve Closing or Device Alert



Blinking Green Once
Valve Opening



Slow Blinking Green Twice
Connecting to Hub



Quick Blinking Red Twice
Valve is Closed



Quick Blinking Green Twice
Valve is Open



Quick Blinking Green
Control-D2D Pairing in Progress



Quick Blinking Red
Control-D2D Unpairing in Progress



Slow Blinking Green
Updating



Fast Blinking Red Once Every 30 Seconds
Low Battery, Replace Batteries Soon

F Install the App

If you are new to Little Giant®, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “BARN-IQ™ app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@miller-mfg.com with some helpful information. Please mark the miller-mfg.com domain as safe, to ensure you receive important messages in the future.

Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You will be able to organize your devices by location in the **Locations** screen later.




Add Your Water Flow Sensor to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

Scanner icon



2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

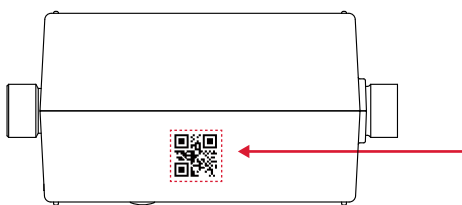


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

Add Your Water Flow Sensor to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

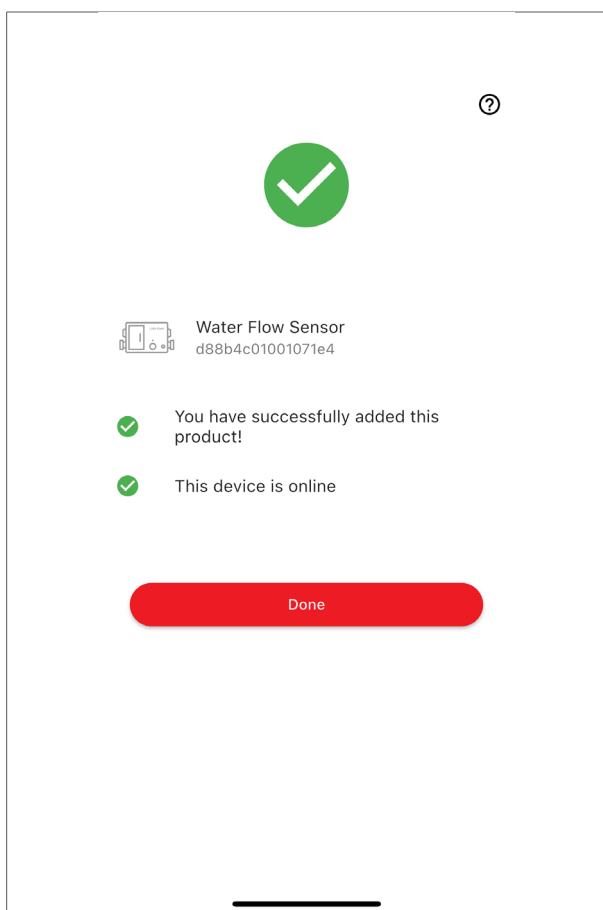

6. If the Water Flow Sensor is not already on, press the SET button for a moment, until the LED illuminates briefly.




Before Installation


- 1.** Please install following the water flow direction shown by the arrow.
- 2.** This product defaults to a Maximum Water Usage Duration per Refill of 10 minutes, Maximum Refills of 20 per day, and Maximum Water Usage of 150 gallons per day. Exceeding any of these limits will automatically close the valve. The valve can be manually reopened using the BARN-IQ™ App (Little Giant® Smart Hub required) or by pressing the SET button on the device.
- 3.** To modify the default values, open the device details page in the BARN-IQ™ App (tap the three dots in top-right corner; Little Giant® Smart Hub required) and select “Device Advanced Settings”. To disable automatic valve operation, toggle the “Auto Shut-off valve” button within the individual product limit settings.

I Install the Water Flow Sensor

1. Turn off the water supply. If an automatic waterer is already installed, disconnect it from the water line.

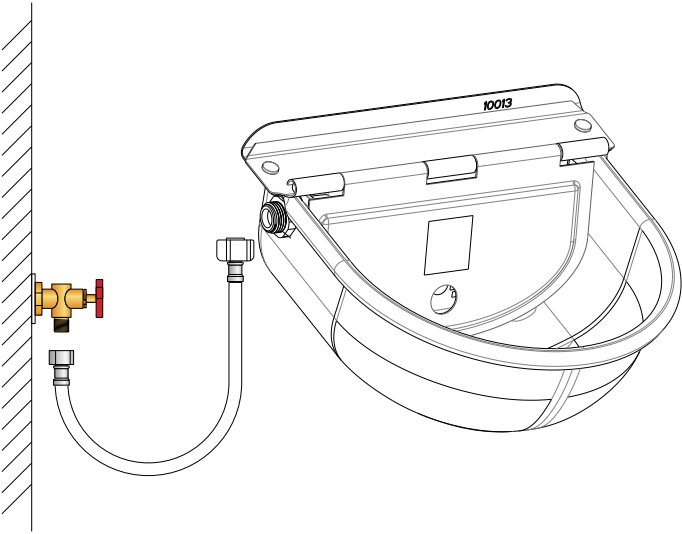


2. Connect the new hose, with one end attached to the valve and the other end to the Water Flow Sensor

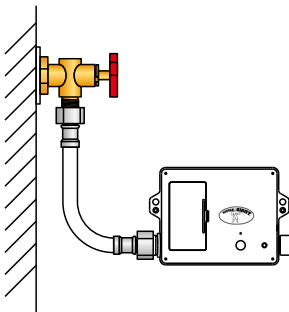




Install the Water Flow Sensor, Continued

3. Reconnect the original hose to the Water Flow Sensor

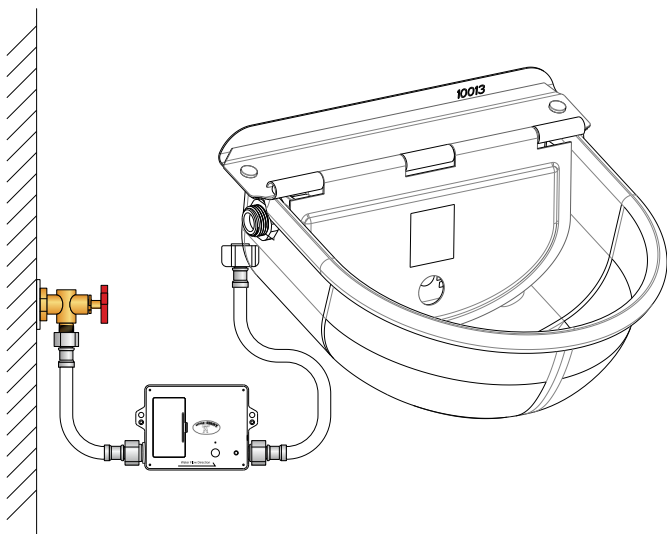


4. Attach the double-sided tape to the back of the Water Flow Sensor, peel off the protective film, and secure it to the wall, if required.

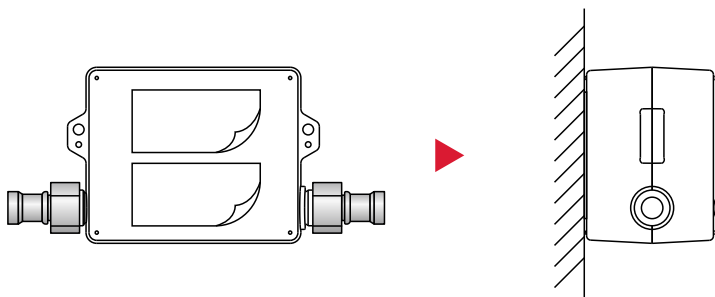

I


Install the Water Flow Sensor, Continued

5. Turn on the water valve, then press the SET button to test the Water Flow Sensor's on/off functionality.

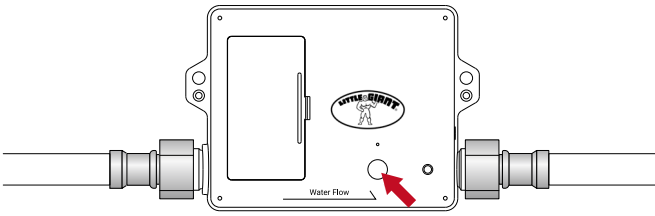**J**

Install the Probe Detection Cable



1. Connect the cable to the Water Flow Sensor, by plugging the male end of the probe cable into the device.

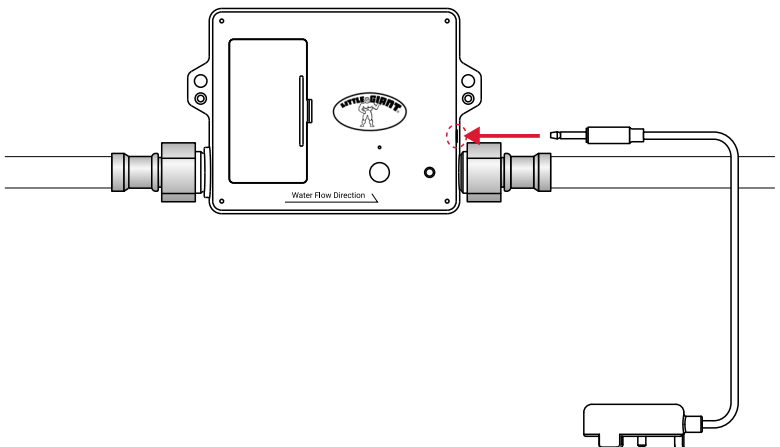


J

Install the Probe Detection Cable, Continued

2. Place the probe cable near or underneath the waterer. The sensor will trigger an alarm if water connects the probes, indicating a possible leak.

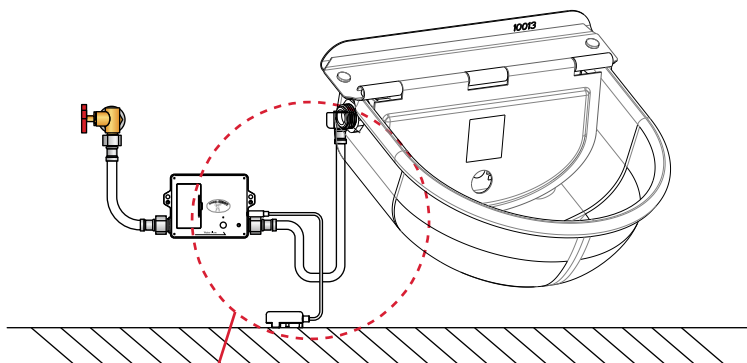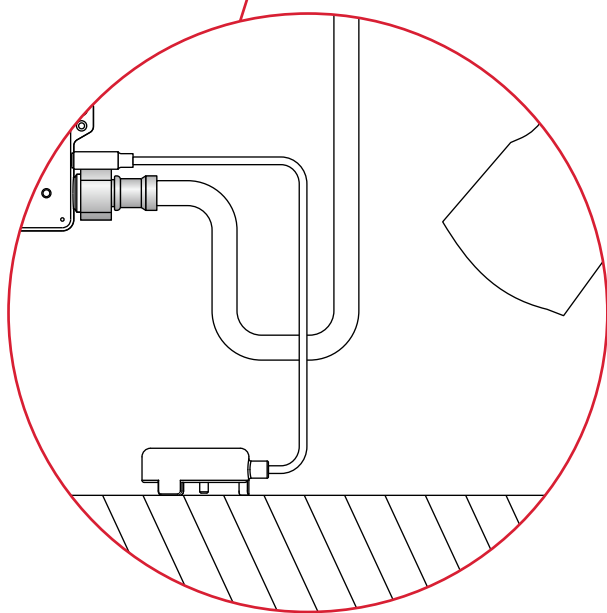

K Power up

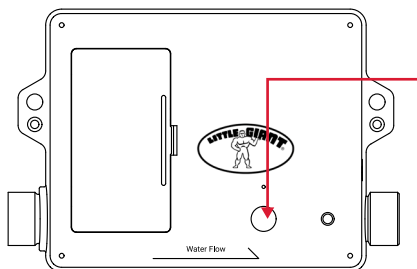

Power up the Water Flow Sensor by briefly pressing the SET button, until the LED flashes (red, then green).

L Testing



1. Valve in Open (Low Power) Mode: The app cannot close the valve or reset water usage in Advanced Settings.
2. Valve in Closed (Active) Mode: The app supports opening the valve and resetting water usage.
3. SET Button: Always works for manual valve control, regardless of mode.



Testing, Continued

Manual Testing via SET Button

1. Close the Valve: Press the **SET button** on the unit to close the valve.

- Listen for a smooth, consistent sound, confirming the motorized valve is functioning properly.
- Verify that the valve is fully closed:
 - a. No water flows through the connected pipes or faucets.
 - b. No sound of water movement is detectable from the valve or fixtures.

2. Open the Valve: Press the **SET button** again to open the valve.

- Activate a connected fixture to ensure water flows smoothly.
- Open the BARN-IQ™ app and check that the water usage readings update as water flows, confirming accurate monitoring.



Testing, Continued

Testing Using the BARN-IQ™ App

1. Ensure the Valve is in the Closed State:

- If the valve is open (low power mode), use the SET button to manually close it.
- In the closed state (active mode), proceed to the app for testing.

2. Open the Valve Using the App:

- Open the BARN-IQ™ app and navigate to your Water Flow Sensor from either the Locations or Favorites screen.
- Select the device and use the app control to open the valve.
- Activate a connected fixture and confirm the following:
 - a. The valve opens as commanded.
 - b. Water flows smoothly through connected fixtures only when activated.


3. Reset Water Usage (Optional):

- If needed, navigate to Advanced Settings in the app while the valve is closed.
- Use the reset function to clear water usage data and prepare the device for accurate future readings.




App Functions: Device Screen

In the app, tap on your Water Flow Sensor Channel icon. Your Water Flow Sensor Channel main screen should be similar to the one shown below.

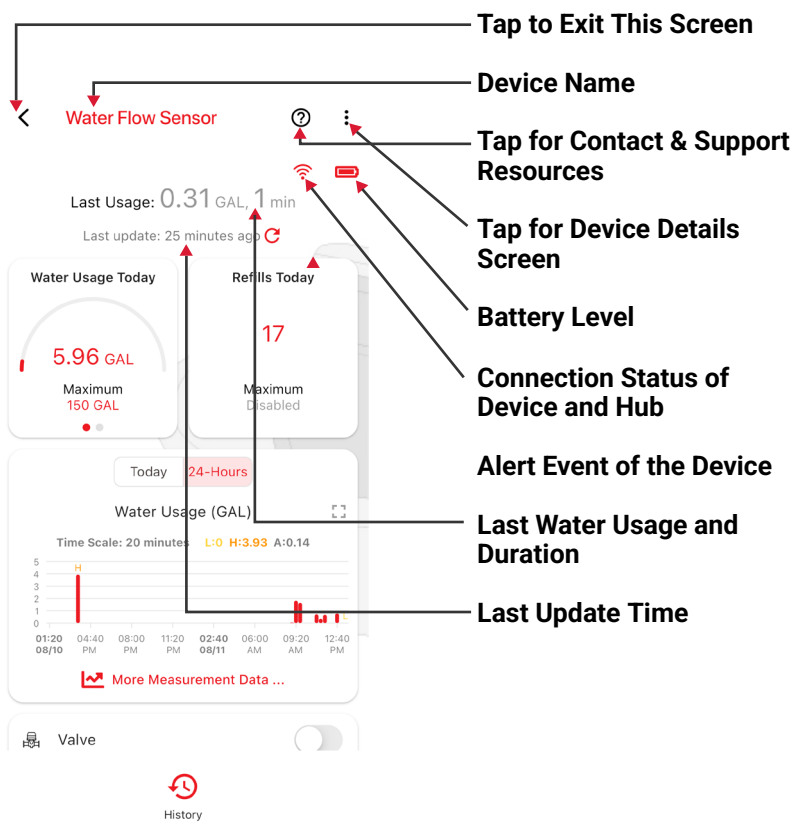



App Functions: Device Screen, Continued

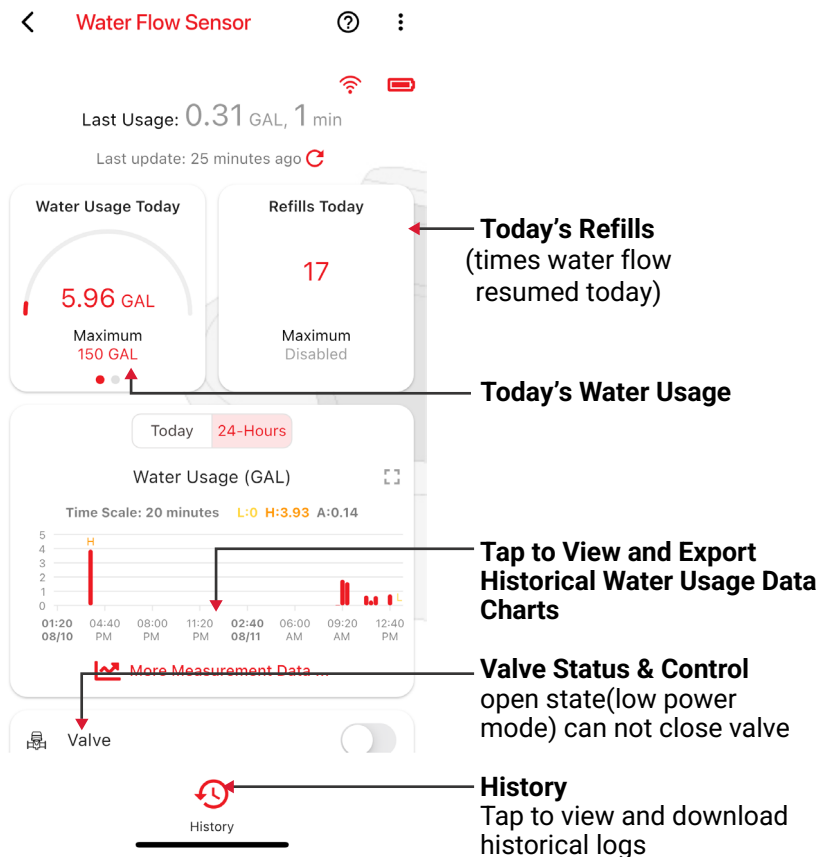



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Water Flow Sensor **Details** screen. Your Water Flow Sensor screen should be similar to the one shown below.


The screenshot shows the 'Details' screen for a 'Water Flow Sensor'. The top bar is red with a back arrow, the title 'Details', and a question mark icon. The main content is a list of settings, each with a red arrow pointing to an annotation on the right. The bottom of the screen shows a 'Valve' control with a toggle switch.

Setting	Value / Action	Annotation
Type	Water Flow Sensor	Device Type
Name	Water Flow Sensor >	Device Name (Tap to Edit)
Location	Not Set >	Location (Tap to Edit)
Favorite	Will show in favorite screen	Favorite (Red if Favorite, Tap to Edit)
History	Get device activity logs	History Tap to view and download historical logs
Historical Measurement Data	Retrieve historical measurement data of the device	Historical Measurement Data Tap to view and export historical water usage data
Alert	GMT-5 >	Alert Tap to edit Alert Settings (see Alert Settings)
Total Water Usage	36.08 GAL	Time Tap to sync with mobile
Device Advanced Settings	>	Total Water Usage
Low Power Mode	Toggle switch	Device Advanced Settings (see Device Advanced Settings)

Valve



App Functions: Device Details Screen, Continued

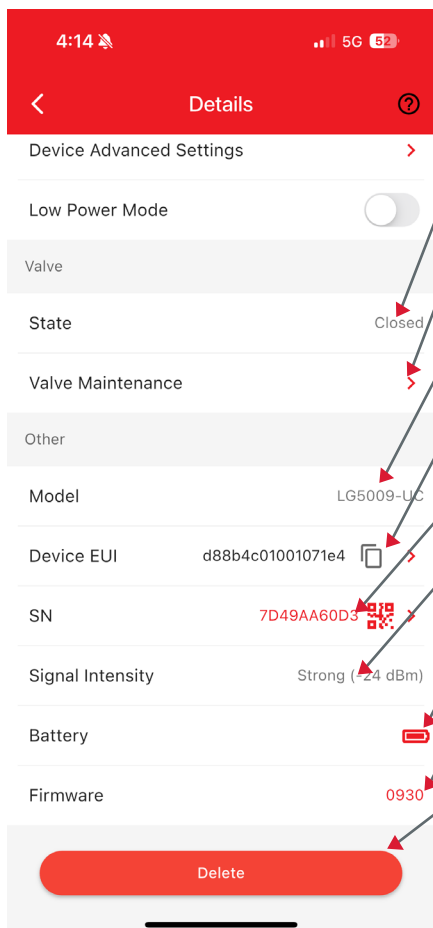

Valve State

Open or Close

Valve Maintenance

Tap to disable or set the valve maintenance cycle

Model Number

Device EUI

Unique Identifier Number (Unique)

Device Serial Number

Signal Intensity

(From Little Giant® Hub)

Battery

Firmware Revision


(Refer to page 35)

Remove Device from Current Account

Tap to delete the device from your Little Giant® account



App Functions: Alert Settings Screen

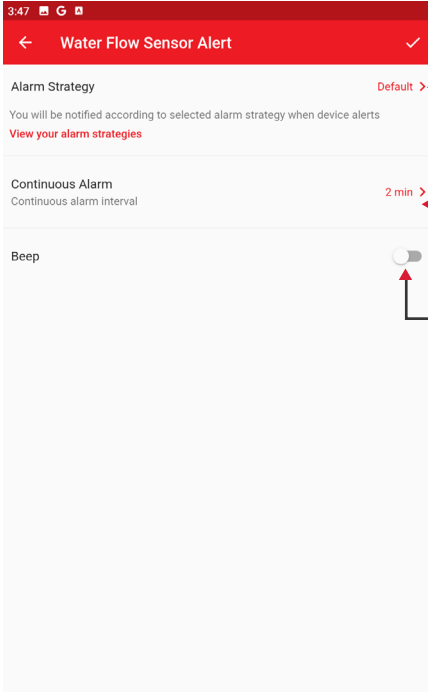

Alarm Strategy

Tap to edit the device's Alarm Strategy

Continuous Alarm


Tap to disable or set the alert repeat time

Beep

Tap to enable or disable beep sound



App Functions: Advanced Settings

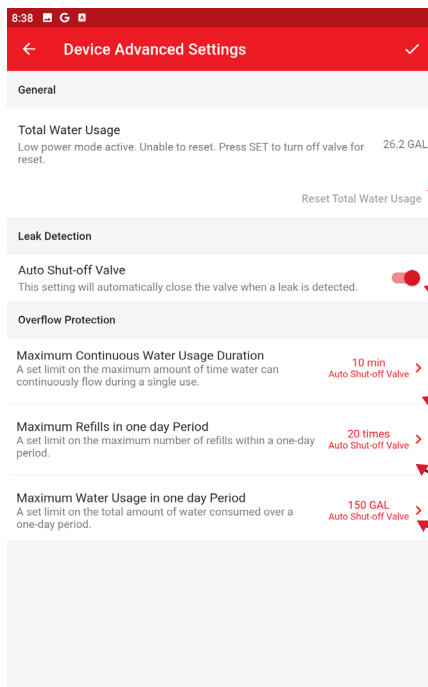

Tap to Reset Total Water Usage
valve open state (low power mode) cannot reset it

Enable or Disable Auto Shutoff for Probe Cable Leak Detection


Maximum Continuous Water Usage Duration

Maximum Refills in One Day

Maximum Water Usage in One Day



App Functions: Smart - Scene

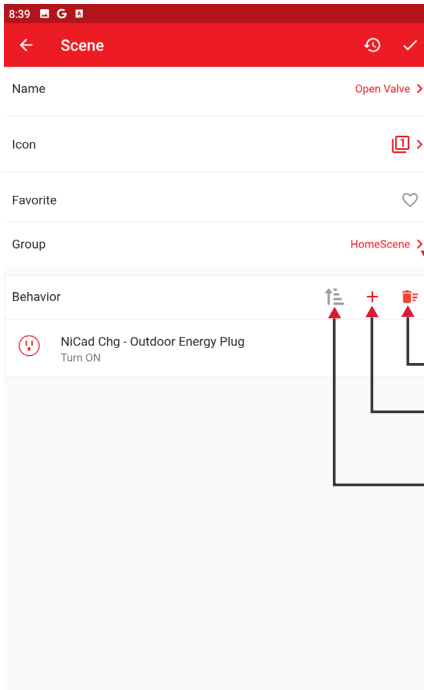

Tap to save the settings

Name

Tap to edit the scene name

Icon

Tap to select a scene icon

Favorite

Tap to make it a favorite scene

Assign the scene to a scene group

Delete the behavior

Add behavior

Tap to add a behavior

Tap to sort behaviors



The Scene settings are saved in the cloud.

One Scene group only shows one active scene. For example, in the Home scene group, if you execute the Home scene, it will show the Home scene activated. If you execute the Away scene next, the Away scene will revert the Home scene's active status to off.



App Functions: Smart - Automation

The Water Flow Sensor can be set up as a condition or an action in automation.

The screenshot shows the 'Automation' screen in the app. At the top, there's a red header bar with a back arrow, the word 'Automation', and a checkmark. Below this, the 'Name' field is set to 'Water Flow Sensor Max Usage Alert'. A red arrow points to the checkmark with the label 'Tap to save the settings'. Below the name field, there's a 'When' section with a red arrow pointing to it labeled 'Tap to set a schedule for the automation'. The 'When' section shows a condition: 'LeakStop 1 Channel' with a sub-condition 'Max water usage warning'. Below this is a red plus icon and the text '+ Add More Conditions'. The 'Then' section is below, with a red arrow pointing to it labeled 'Add behavior Tap to add a behavior'. The 'Then' section shows a behavior: 'Notification : Default' with a sub-behavior 'Message : Water Flow Sensor has reached maximum water usage today'. A red arrow points to the plus icon between 'When' and 'Then' with the label 'Delete the behavior'. Another red arrow points to the behavior list with the label 'Tap to sort behaviors'. Below the behavior list is the 'Working Time' section, which is currently set to 'Always Working'. A red arrow points to this section with the label 'Always Working Tap to set when the automation can be activated'. At the bottom is the 'Advanced Settings' section, which is currently collapsed. A red arrow points to the expand/collapse icon with the label 'Advanced Settings Tap to edit advanced automation and logging settings'.

Tap to save the settings

Edit the name of the automation

Tap to set a schedule for the automation

Add behavior
Tap to add a behavior

Delete the behavior

Tap to sort behaviors

Always Working
Tap to set when the automation can be activated

Advanced Settings
Tap to edit advanced automation and logging settings

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App and email notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. At the top, there is a red header with a back arrow and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with a red question mark icon and a red arrow pointing to it labeled 'Strategy Name Tap to edit the name'; 'Related Devices' with a red arrow pointing to a '1 >' icon labeled 'Related Devices Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy'; 'Enable Device Alarm' with a red arrow pointing to a red toggle switch labeled 'Tap to Enable or Disable The Strategy'; 'Do Not Disturb' with a red arrow pointing to a grey toggle switch labeled 'Tap to Set Up DND (Do Not Disturb)'; 'Alarm Latch' with a red arrow pointing to a 'Disabled' status and a red arrow pointing to a dropdown menu labeled 'Tap to Set Up DND (Do Not Disturb)'; 'Send App Notification' with a red arrow pointing to a dropdown menu labeled 'Admin'; 'Send Email' with a red arrow pointing to a dropdown menu labeled 'Admin'; and 'Trigger Action' with a red arrow pointing to a dropdown menu labeled 'None'. At the bottom, there is a red 'Save' button.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable The Strategy

Tap to Set Up DND (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' configuration screen. At the top is a red header with a back arrow, the title 'Alarm Strategy', and a help icon. Below the header are several sections: 'Name' with a value of 'Always' and a chevron; 'Related Devices' with a value of '1' and a chevron; 'Enable Device Alarm' with a red toggle switch; 'Do Not Disturb' with a toggle switch; 'Alarm Latch' with a value of 'Disabled' and a dropdown arrow; 'Send App Notification' with a value of 'Admin' and a dropdown arrow; 'Send Email' with a value of 'Admin' and a dropdown arrow; and 'Trigger Action' with a value of 'None' and a chevron. A red 'Save' button is at the bottom. Annotations with arrows point to the 'Admin' dropdowns for 'Send App Notification', 'Send Email', and the 'Trigger Action' dropdown.

3:54

Alarm Strategy

Name Always >

Related Devices 1 >

Enable Device Alarm

Do Not Disturb

Do Not Disturb

Alarm Latch Disabled

The alarm automatically clears once the triggering condition is resolved.

Send App Notification Admin

Send Email Admin

Will send Email to the administrator of this home when device alerts

Trigger Action None >

Save

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Trigger Action

Tap to choose trigger

T Control D2D

Control-D2D is a unique device-to-device control technology. Using Control-D2D, compatible Little Giant® devices can control or be controlled by other Little Giant® devices, without a hub or internet connection. One device can control another device, directly.

A device that controls or sends out commands is called the **controller**. A device that is controlled or receives the commands is called the **responder**. An example of a controller are a Water Flow Sensor, while examples of a responder are Smart Plug.



Use of Little Giant® Control-D2D is optional.

One device can be Control-D2D-paired to up to 128 other devices.

Pairing is separate from the app and any automation, scenes or alarm strategies you may have configured in the app. Use care to not create automations that conflict with Control-D2D-pairing and vice-versa.

During pairing, the controlled device must be in the state (open, on, etc.) that it should transfer to when signalled by the controller.


T Control D2D, Continued



The Water Flow Sensor only supports its probe cable leak detection function as a controller for Device-to-Device (D2D) Control and does not function as a responder.

Pairing

1. To configure a Water Flow Sensor as a controller, press and hold the leak sensor's SET button for 5-10 seconds, until the LED quickly blinks green, then release the button.

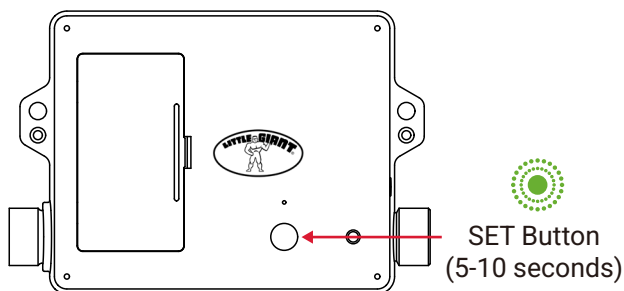

2. To configure a Outdoor Smart Plug as the responder, turn on the plug by pressing the POWER button or via BARN-IQ™ app. Press and hold the POWER button for 5-10 seconds until the LED quickly blinks green, then, release the button.

Testing

- 1. Test the Leak Probe Cable:** Immerse the leak probe cable into water to simulate a leak scenario.
- 2. Verify Smart Plug Activation:** Confirm that a push notification and/or email are received immediately upon detecting water.

T Control D2D, Continued

Unpairing

1. At the Water Flow Sensor, press and hold the SET button for 10-15 seconds, until the LED quickly blinks green then red, then release the button.

2. At the Little Giant® Smart Plug, press and hold the SET button for 10-15 seconds, until the LED quickly blinks green then red, then release the button.

Upon unpairing, either the Water Flow Sensor or the Outdoor Smart Plug will stop blinking and turn off.

At this time, you can test the Water Flow Sensor to confirm it no longer activates Smart Plug. If you also have any automations or alarm strategies that may also control the Smart Plug, disable them before testing.

V Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the SET button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.



Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.

Firmware Update

Your Little Giant® products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says "#### ready now"


Other	
Model	YS1603-UC
Device EUI	d88b4c160301c746  >
SN	5707DC86F2  >
Firmware	0356 0359 ready now.

Tap in this area to start the update.


The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.

X Battery Replacement

- 1 Remove the battery cover by gently prying with your fingertip or tool at the edge as shown

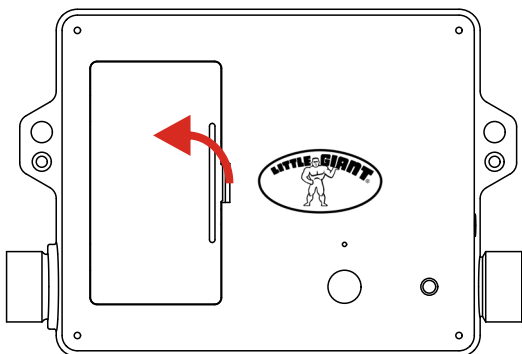


- 2 Remove the old batteries

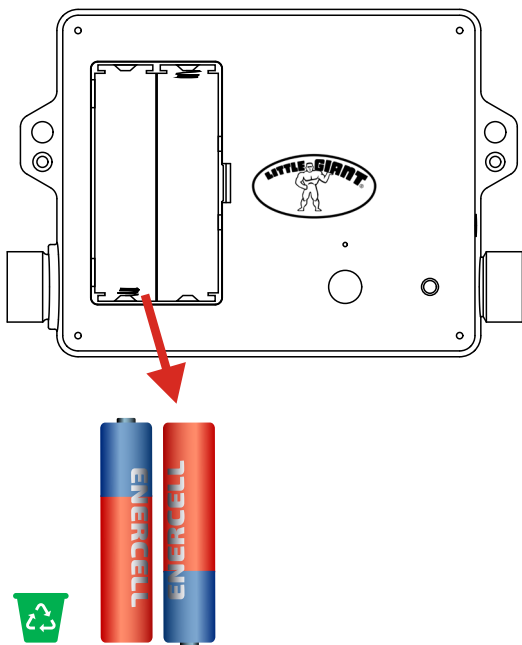


X Battery Replacement, Continued

- 3 Install two new alkaline non-rechargeable AA batteries

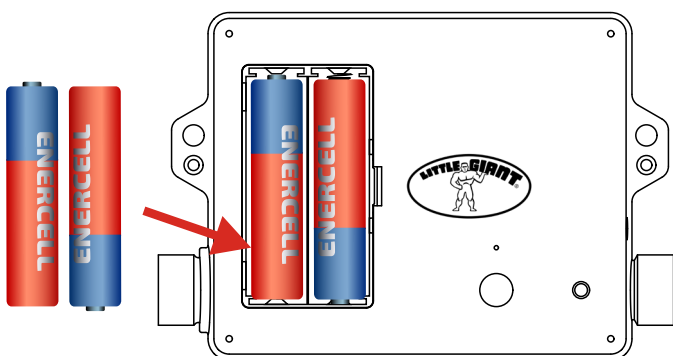

- 4 Close the battery cover

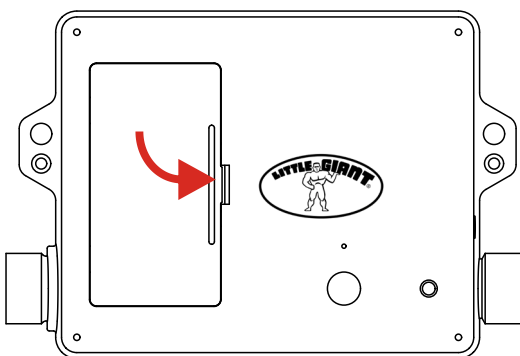



Specifications


Voltage:	3VDC (2 non-rechargeable AA batteries)
----------	---

Device current Draw:	$\leq 90\mu\text{A}$ (standby) $\leq 135\text{mA}$ (work)
----------------------	--


Dimensions, Imperial (L x W):	4.80 x 3.22 x 2.39 inches
----------------------------------	------------------------------

Dimensions, Metric (L x W):	122 x 81.9 x 60.6 mm
--------------------------------	----------------------


Environment:	Working Temperature: 32.18°F - 158°F (0.1°C-70°C) Working Humidity: $\leq 90\%$ non-condensing
--------------	--

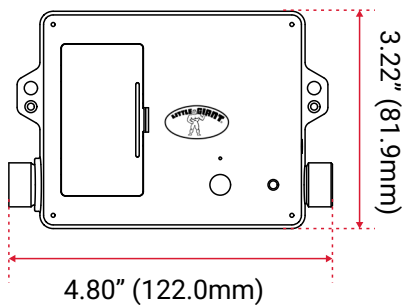

FRONT

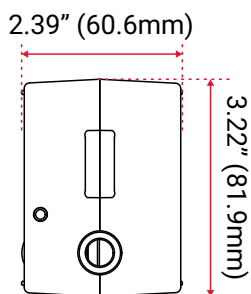

SIDE

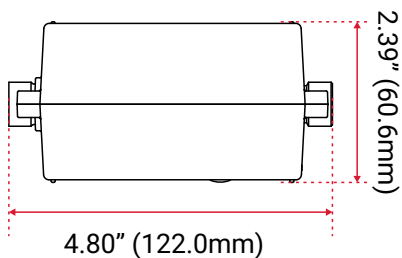

TOP

Z Warnings

- Please install, operate and maintain the Water Flow Sensor only as outlined in this manual. Improper installation or use may damage the unit and/or void the warranty.
- Do not install or use the device outside of the temperature and humidity range listed in the environmental specifications.
- The device is not waterproof, do not immerse or allow the devices to be immersed or submerged in water.
- Avoid placing the devices in extremely dirty or dusty environments.
- If the device does get dirty, please clean it by wiping it down with a clean dry cloth. Do not use strong chemicals or detergents, which may damage or discolor the exterior and/or damage the electronics, voiding the warranty.
- Do not install the device where it may be subjected to vandalism, abuse, physical impacts or strong vibrations. Physical damage is not covered by the warranty.
- Power the Water Flow Sensor only with new battery. Do not use rechargeable batteries, do not use other type batteries (e.g. zinc blend).

Z Warnings, Continued

- If storing the Water Flow Sensor for extended periods, remove the battery.
- Please contact Customer Support before attempting to repair, disassemble or modify the device, any of which can permanently damage the device and void the warranty.

We offer a 1 year manufacturing defect warranty for all Little Giant® smart products. You must have proof of purchase in order to begin the process. This warranty does not apply to damage caused by misuse or neglect in the field, failure to follow installation instructions, or damage due to normal wear and tear.

In the event a product needs to be returned for a warranty claim, all returns require a, RMA # (Return Material Authorization). Contact Customer Service at 800-260-0888 for the RMA number before returning the item(s) to our facility.

Visit our product warranties page on our website for our full warranty information:

<https://miller-mfg.com/pages/product-warranties>

or by scanning the QR code:



1. Enclose a note with the product that includes your full name, full address, and phone number. In addition, the provided RMA # and possible problem.

2. Enclose proof of purchase receipt

3. Send the product and above information to:
Miller Mfg. Co., Attn: Repairs, 1450 West 13th
Street, Glencoe, MN 55336 Or call **800-260-0888**
For additional details on our warranty policy,
please visit our website Product Warranties
| Miller Manufacturing Company.



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
WATER FLOW SENSOR

PARTY:
MILLER MANUFACTURING.

TELEPHONE:
800-260-0888

MODEL NUMBER:
LG5009-UC

ADDRESS:
MILLER MANUFACTURING
GLENCOE, MN 55336 USA

EMAIL:
CUSTOMERSERVICE@MILLER-MFG.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using the BARN-IQ™ app or Little Giant® Sensors!

Need help? For fastest service, please email us 24/7 at customerservice@miller-mfg.com

Or call us at **800-260-0888**,
Monday - Friday 7:00 AM to 5:00 PM CT.

You can also find additional support and ways to contact us at:
www.miller-mfg.com

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at customerservice@miller-mfg.com

Thank you for trusting Little Giant®



© 2026 Miller Manufacturing

Miller Manufacturing
Glencoe, MN 55336 USA
www.miller-mfg.com